

Recall:

When pressed, will give the previous lap or finish.

Can be used to go through every finish while the clock is running.

The number "1), 2), etc." represents the order of the finishers.

All finishing times can be recalled after the clock is stopped, but before

The next start sequence is started.


Lap/reset:

1) When clock is running,
Press as boats are called over
Will give the finishing time
and split from previous boat
without stopping the watch.

2) When watch is stopped,
Will reset all readings to "0"

Note: When the display becomes dim or turned off, battery replacement is necessary. Unscrew and remove the back cover. Push the left-hand side of the battery holder. Battery will slide out. Replace a new Lithium CR2032 or equivalent with positive side facing up. Connect the two AC pads one second using a metal tool such as a paperclip or screwdriver. Re-screw the back cover.

Replacement batteries and a screwdriver are available in the committee boat box.

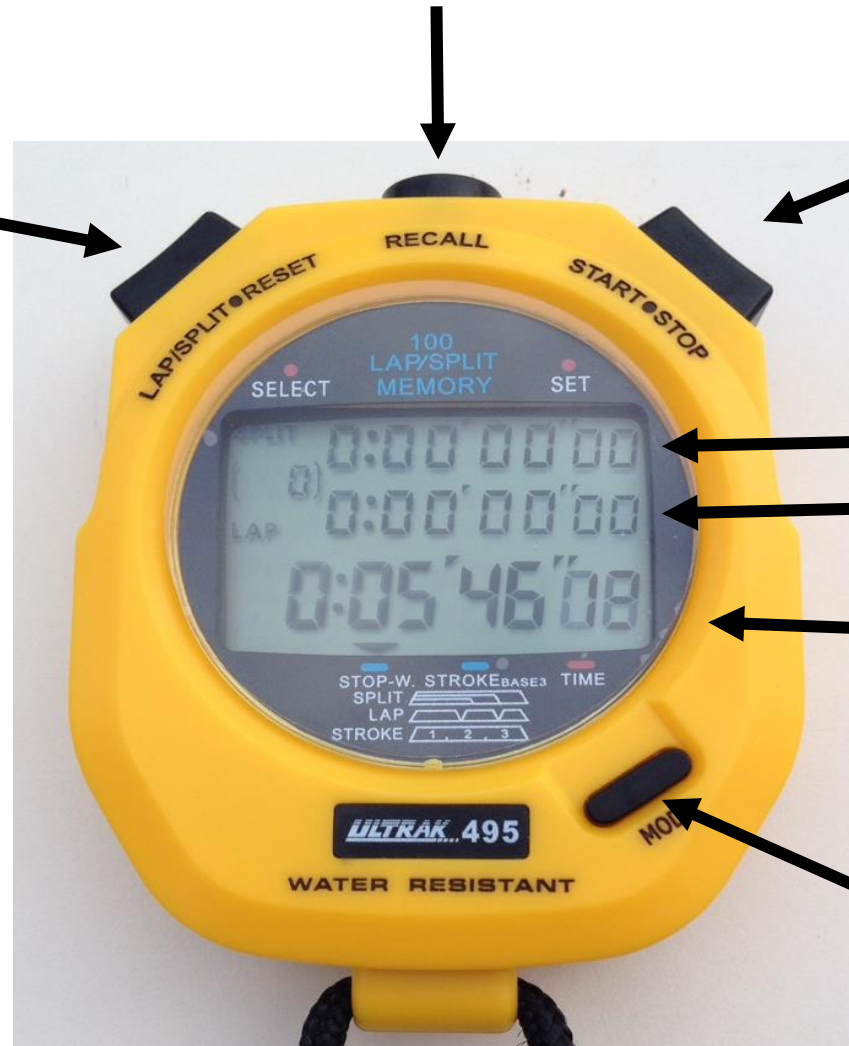

Start/stop: Sets the start of the race sequence;
Do not touch until all boats have finished.

Lap time: Time of last lap/finisher

Split time: Time between laps/finishers

Race time: Time of race + start sequence.
Should always be running during the race.

Mode Button: Make sure this stopwatch mode is selected, is the next mode after time/calendar setting.